

Instalační manuál

NAPOJENÍ NA STUDENOU VODU

- Před samotnou instalací se prosím přesvědčte, že na produktu nejsou žádné viditelné vady.
- Před instalací si prosím pozorně přečtěte návod.




1.

Namontujte do nádržky vypouštěcí (splachovací) ventil a do umývátko splachovací tlačítko. Propojte je bovdenem.



2.

Namontujte hadičku do ventilu (1/2" / 1/2").

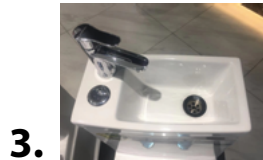

3.

Namontujte ventil na umývátko.




4.

Namontujte výpust na umývátko.


5.

Propojte napouštěcí ventil s hadičkou na studenou vodu a namontujte ho do otvoru ve dně nádržky blíže ke zdi. (Umývátko můžete položit příčně přes nádržku.)

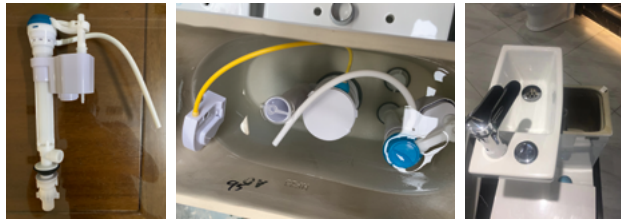

6.

Připojte druhou hadičku na studenou vodu na průchodku nádržkou, kterou prostrčte dnem nádržky (otvor blíže k míse) a připevněte.

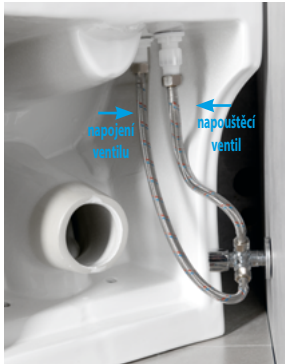

7.

Propojte flexibilní hadičky (3/8" / 1/2") s roháčkem. Propojte hadičku od ventilu s přívodem vody k ventilu (průchodkou v nádržce).

8.

Usadte umývátko na nádržku.

Instalační manuál

NAPOJENÍ NA SMÍŠENOU VODU

- Před samotnou instalací se prosím přesvědčte, že na produktu nejsou žádné viditelné vady.
- Před instalací si prosím pozorně přečtěte návod.



1.

Namontujte do nádržky vypouštěcí (splachovací) ventil a do umývátko splachovací tlačítko. Propojte je bovdenem.



2.

Namontujte hadičku do ventilu (1/2" / 1/2").



3.

Namontujte ventil na umývátko.



4.

Namontujte výpust na umývátko.

5.

Propojte napouštěcí ventil s hadičkou na studenou vodu a namontujte ho do otvoru ve dně nádržky blíže ke zdi. (Umývátko můžete položit příčně přes nádržku.)



6.

Připojte druhou hadičku na studenou vodu a hadičku na teplou vodu na regulátor teploty. Regulátor namontujte na průchodku nádržkou, kterou prostrčte dnem nádržky (otvor blíže k míse) a připevněte.



7.

Propojte flexibilní hadičky (3/8" / 1/2") s roháčkem. Propojte hadičku od ventilu s přívodem vody k ventilu (průchodkou v nádržce).







8.

Usadte umývátko na nádržku.

Installation manual

- Before you begin, carefully inspect the new toilet for visible damage or manufacturing faults.
- Read the installation manual before proceeding to installation.






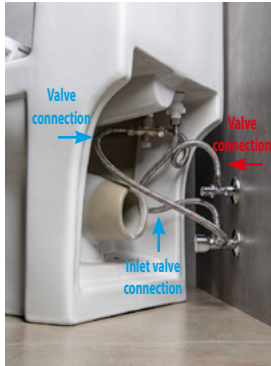
COLD WATER CONNECTION

		<p>1.</p> <p>Install a flush (drain) valve to the cistern and the control button to the washbasin. Connect them through the pop up waste.</p>
 <p>2.</p> <p>Connect the flexible hose (1/2" / 1/2") to the valve.</p>	 <p>3.</p> <p>Install the valve on the basin.</p>	 <p>4.</p> <p>Install the drain.</p>
<p>5.</p> <p>Connect the inlet valve to the cold water hose and fit it into the hole in the bottom of the cistern closer to the wall. (You can lay the washbasin across the cistern.)</p> 		
<p>6.</p> <p>Connect the second cold water hose to the grommet through the tank through the bottom of the tank (opening closer to the WC pan) and attach.</p> 	<p>7.</p> <p>Connect the flexible hoses (3/8" / 1/2") with the angle valve. Connect the hose from the valve to the water inlet which goes through the grommet in the cistern.</p>	
<p>8.</p> <p>Place the basin on the cistern.</p>		

Installation manual

- Before you begin, carefully inspect the new toilet for visible damage or manufacturing faults.
- Read the installation manual before proceeding to installation.

COLD/HOT WATER CONNECTION

		<p>1.</p> <p>Install a flush (drain) valve to the cistern and the control button to the washbasin. Connect them through the pop up waste.</p>
 <p>2.</p> <p>Connect the flexible hose (1/2" / 1/2") to the valve.</p>	 <p>3.</p> <p>Install the valve on the basin.</p>	 <p>4.</p> <p>Install the drain.</p>
<p>5.</p> <p>Connect the inlet valve to the cold water hose and fit it into the hole in the bottom of the cistern closer to the wall. (You can lay the washbasin across the cistern.)</p> 		
<p>6.</p> <p>Connect the second cold water hose and the hot water hose to the temperature pre-regulator. Install the pre-regulator to the grommet going through the bottom of the tank (opening closer to the WC pan) and fasten it.</p> 		<p>7.</p> <p>Connect the flexible hoses (3/8" / 1/2") with the angle valve. Connect the hose from the valve to the water inlet which goes through the grommet in the cistern.</p>
<p>8.</p> <p>Place the basin on the cistern.</p>		